



WE HOLD THE RADICAL BELIEF THAT DOING BUSINESS WITH INTEGRITY HAS THE POWER TO CHANGE THE WORLD.

THROUGH OUR "YOU SHARE. WE SHARE." GIVING PROGRAM, YOU CAN PROVIDE ENERGY SOLUTIONS WHERE THEY ARE NEEDED MOST.

TAG US AND HELP LIGHT A LIFE.

@REVELGEAR
REVELGEAR.COM

WARRANTY & RETURN POLICY


This product is covered by a limited warranty policy. Please visit www.revelgear.com/warranty for details.

SUPPORT

If you require additional support, please email us at support@revelgear.com.

FAQs

For a list of frequently asked questions, please visit www.revelgear.com/trail-hound-FAQs.

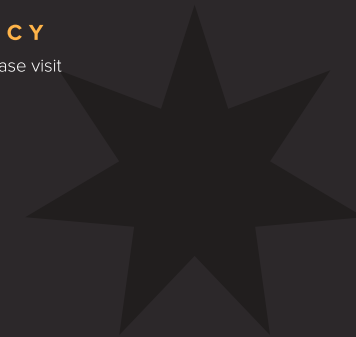

REVEL[®]
G E A R



MODE

Cycle through the various modes: Blink, Flash, Fire Crackle, Fade In / Out, Strobe.

DIMMER + MODE SPEED

If using the solid light mode, tap this button to cycle through the 7 brightness settings.* If using one of the modes, tap this button to cycle through the 5 mode speeds. Press and hold this button to turn lights off. Tap again to turn lights on.

*Each step down in brightness = ~12% less energy used.

RESET

Tap this button to cancel any mode and restore to solid light mode.

PRO TIPS

Thank you for your purchase and welcome to the REVEL GEAR® family!

The patented technology in our Trail Hound™ USB Camping Lights is designed to give you the brightest light over the longest distance while using as little energy as possible.

These lights will run on any external power source via USB-A connection.

The built-in dimmer feature allows you to set the perfect mood, or conserve energy if you're adventuring off grid.

While your new lights ARE waterproof up to the USB cable, they are not intended for underwater use.

To maintain order in your light strand and to avoid getting tangled, follow these instructions:

UNSPPOOLING

Take your time with the first unspooling. Undo the velcro tie, and locate the end of the strand that is farthest from the USB cable. Gently uncoil the farthest end of the strand until it is free to unravel.

Hold the bundle of lights in one hand and use the other hand to begin guiding the farthest end outwards and away from the bunch. Go slowly and it will uncoil smoothly without getting tangled.

Once your light strand is fully extended, carefully run your fingers along the strand to remove the wire's memory and straighten the line. This will make it easier for all future use.

RESPoolING

Locate the end of the strand that is farthest from the USB cable.

Use your hand as a "spool" and begin gently winding the wire around your hand in a circular motion.

Important: Leave approximately 3 inches of slack at the farthest end of the strand which will later be used to secure the bundle of lights once all 30 feet are wound up.

Carefully wind up all 30 feet of wire around your hand until you reach the USB cable.

Take the 3 inches of slack from the farthest end of the strand and recoil it around the bundle of lights.

Lastly, secure the USB cable to the bundle of lights using the velcro tie.

SAFETY WARNING

To avoid risk of strangulation and electric shock, do not leave this product unattended. Long wires pose a strangulation hazard to infants, young children, and animals.

In the event that your lights are damaged or cease to function properly, stop use immediately and contact REVEL GEAR at support@revelgear.com.

Do not cut, modify, or attempt to repair the product in any way. If you have epilepsy or have had seizures or other unusual reactions to flashing lights or patterns, consult a doctor before use.

Retain these instructions for future reference.